 



 









 


How to use the washing machine

To remove any residual water used in testing by the manufacturer, we recommend that you carry out a short wash cycle without laundry. Open the tap. Close the door. Pour a small amount of detergent (about 30 ml)  into the detergent dispenser. Select a short wash programme (see programme chart). Press the "Start/On Off" button  (depends on model).

Sort the laundry	Sort the laundry according to: Fabric type / care label symbol Cottons, mixed fibres, easy care/synthetics, wool, handwashed items. Colours Separate coloured and white articles. Wash new coloured articles separately. Size Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum. Delicates Wash delicates separately: Use a special programme for Wool  , curtains and other delicates. Always remove curtain glides or wash curtains with the glides inside a cotton bag. Use the special program for handwash fabrics. Wash small articles (e.g. nylon stockings, belts etc.) and articles with hooks (e.g. bras) in special cotton bags for washing machines or in zipped pillow cases.
Prepare the laundry	Empty all pockets Coins, safety pins and similar items can damage your laundry and the appliance drum. Closures Close zips and hooks and eyes; loose belts or ribbons should be tied together. Stain removal Blood, milk, egg etc. are generally removed by the enzyme phase of the programme. To remove red wine, coffee, tea, grass and fruit stains etc. add a stain removing agent in detergent dispenser  or chlorine bleach in compartment  (depending on model). Particularly stubborn stains can be treated with stain remover before the wash. Dyeing and Bleaching Commercially available products usually consist of a dye colour, fixing agent and salt. Pour the dye colour, the fixing agent and then the salt directly into the empty drum. Load the laundry only afterwards. Use exclusively dyes and bleaches recommended for washing machines. Follow the Manufacturer's instructions. Plastic and rubber components of the machine can be stained by dyes. Make sure that all zips are closed and pockets are empty. Make sure there are no cigarette lighters among the items. Turn the items of clothing inside out.
Open the door	To open the door press the button inside the handle and pull. If the child lock is active, deactivate it.
Load the laundry and close the door.	For optimal washing results, place items loosely into the washing machine. Close the door.
Choose and measure out the detergent and additives	The type of detergent depends on: The type of fabric (cottons, synthetics, delicates, wool - when washing woollens remember to use a detergent suitable for woollens), the colour, the washing temperature, the degree and type of soiling. Dosage Follow the dosage recommendations on the detergent pack. For the water hardness in your area, you can request information from the water company. Soft water requires less detergent than hard water (refer to the water hardness table in the operating instructions).
Switch on the washing machine and select the programme	To switch on the washing machine, press the "On/Off" button. To select the programme, turn the knob. The corresponding symbol will appear on the display. To change the programme once the wash cycle has started, turn the knob to "○" and set the new programme.
Select the desired special options	Select an option by pressing the corresponding button. Press the button again to cancel the option. Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.
Switch on the appliance	Open the tap and press the "Start" button. The current stage of the programme is shown on the display.
Programme end – Unload the laundry	The Start button switches off at the end of the wash cycle. Check functions.
Switch off the appliance	Turn the knob to "○". Turn off the tap. Open the door and unload the machine. Leave the door ajar to allow the drum to dry out.



Programme table			Detergent and additives				Options						
Programme	Care Labels	Type of wash	Load kg	Fabric-Softener	Main Wash	Prewash	Start Delay	Prewash	Intensive Rinse	Rinse Hold	Spin	Quick-wash	Max. Speed Spin
Cotton	 90°, 75° 60°, 40°, 30°	Averagely to lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. For heavily soiled loads the “Prewash” option can also be selected.	5,0	*	Yes	*	*	*	*	*	*	*	1000
Synthetic	 60°, 50° 40°, 30°	Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perton, Nylon) or blends with cotton. For heavily soiled loads the “Prewash” option can also be selected.	2,5	*	Yes	*	*	*	*	*	*	*	800
Delicate	 40°, 30°	Curtains and delicate clothing, dresses skirts, shirts and blouses. “Intensive Rinse” is not possible in this programme.	1,5	*	Yes	—	*	—	—	*	*	—	500
Wool	 40°, 30°, 20°	Only machine washable woollens with pure new wool label.	1,0	*	Yes	—	*	—	—	—	*	—	800
Hand wash		Textiles made of linen, silk, wool and viscose marked as “handwashable”.	2,0	*	Yes	—	*	—	—	—	*	—	800
Cold wash		Averagely to lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. For heavily soiled loads the “Prewash” option can also be selected. A spin cycle is carried out at the end of this programme.	5,0	*	Yes	—	*	—	*	*	*	—	1000
Rinse		To rinse and refresh laundry.	5,0	*	—	—	*	—	—	—	*	—	1000
Drain/Spin		Drain and spin.	—	—	—	—	*	—	—	*	*	—	1000

* Programmes in conformity with IEC/EN 60456.



What to do if...

...The appliance will not start, the Start button is not blinking:

Check whether:



- The appliance is plugged in.
- The wall socket is functioning correctly (use a table lamp or similar).

...The appliance will not start, but the Start button is blinking:

Check whether:



- The appliance door is properly closed.
- A programme has been selected.
- The water tap is open. If not, open the tap and press the Start button.

...No water supply:

Check whether:



- The tap is turned on completely.
- Kinks are present in water hose.
- The water hose filter is clogged.
- The water hose is frozen up.

...Waste water not pumped out:

Check whether:



- The drain hose is correctly installed (see "Installation Instructions" in the Instructions Manual).
- The filter is clogged.
- The drain hose is frozen up.

...Detergent and additive product residues in detergent drawer at end of wash:

Check whether:



- The siphon is correctly installed and clean (see "Care and Maintenance" in the Instructions Manual).
- Enough water is being supplied. The mesh filters between the inlet hose and the tap could be clogged (see "Care and Maintenance" in the Instructions manual); check and clean the filter two or three times a year (see "Removing the filter" in the Instructions Manual).

Note:

Too much detergent can result in excess foam formation, which reduces washing efficiency. If the appliance detects excessive foam it may prevent spinning. Insufficient detergent may result in grey laundry, deposits on the drum, tub and heater. To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball or bag supplied with the detergent and place it inside the drum.

Whitish residues on dark fabrics are caused by insoluble compounds used in modern phosphate-free powder detergents. If this occurs, shake or brush out the fabric or use liquid detergents.

Keep detergents and additives in a dry place and out of reach of children.

Use only detergents and additives specifically produced for domestic washing machines. If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use. Descaler could contain components that can attack parts of your washing machine.

Do not use any solvents (e.g. turpentine, benzene, etc.). Do not machine wash fabrics that have been treated with solvents or flammable liquids.

...Machine vibrates during spin cycle:

Check whether:



- The machine is perfectly horizontal with all four feet on ground (see "Installation" in the Instructions Manual).
- The transit bolts have been removed. The transit bolts must be removed before the appliance can be used (see "Installation" in the Instructions manual).

...Final spin results are poor:

Check whether:



- The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (bathmat, bathrobe, etc.) this system may reduce the spin speed automatically to protect the appliance or even interrupt the spin cycle altogether, if the imbalance is too great even after several spin starts.
- If the laundry is still too wet at the end of the cycle, add smaller articles of laundry and repeat the spin cycle.
 - Excessive foam formation may also prevent spinning. Ensure correct amount of detergent is used.

AFTER SALES SERVICE

If, after carrying out the above checks, the malfunction persists or appears again, turn the appliance off and call our After-Sales Service (see guarantee).

Specify:

- The nature of the problem
- The type and model of washing machine
- **The service code (the number after the word Service). The After-Sales Service sticker is on the right side of the open door.**

SERVICE 0000 000 00000





Please read the Instructions Manual carefully before using your new washing machine

GB

Quick Reference Guide



Programme selector

To select a programme, turn the knob.
The corresponding symbol will appear on the display.
To change the programme once the wash cycle has started, turn the knob to "○" and set the new programme.
When the knob is on "○" three dashes blink on the display.

Départ
Annulation
programme



Start button

When you press this button, it lights up and the wash cycle starts. At the end of the wash cycle the light will turn off and END will appear on the display.

Marche
Arrêt



On/Off button

This button switches the washing machine on/off.

Changing or interrupting the programme during the wash cycle

Turn the programme selector to the "○" position.
Select the new programme (with temperature), any options and another spin speed if you want.
Press the "Start" button again. If the "On/Off" button is pressed, no detergent has to be added.

Cancelling a programme before the end

Turn the programme selector to the "○" position.
Set the programme selector to programme setting "Drain/Spin".
Press the "Start" button to start the "Drain/Spin" cycle.

Display

Shows the wash cycle sequence.



Options

Selecting any option the indication lights up.
When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically.
Unsuitable combinations of options are deselected automatically.

Start Delay

Delays the start of the wash cycle by 1 to 16 hours. Each time the button is pressed, the start of the wash cycle is delayed by 1 hour.

Prewash

Only for heavily soiled laundry (e.g. sand, granular dirt). Programmes with Prewash last approx. 15 minutes longer.

Intensive rinse button

More water and a longer time in rinse cycle is added.
The intensive rinse function is especially suitable for areas with particularly soft water, for baby clothes and to help people with allergies.

Rinse Hold

The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
This option is particularly recommended for the programme "Synthetics" or "Delicate".

This function is particularly useful if you want to postpone spinning to a later time or when you do not wish to spin the clothes.

To terminate the "Rinse Hold" option (in synthetic and wool programmes only)

Press the "Rinse hold" button again; the load will be spun according to the selected programme.

If you do not wish to spin the clothes, turn the programme selector knob to the drain programme, after pressing the "No Spin" button.

Spin

Every programme has an automatic predefined maximum spin speed.
Press the button to select a different spin speed.
If the spin speed "0" is selected, the final spin is cancelled. The water is drained out only.

Quick wash

For quick, economical washes. Especially suitable for small, lightly soiled loads. This option can be used with Cotton and Synthetic programmes. Selecting this function allows you to shorten the wash cycle time depending on the temperature.

Note: reduce the detergent quantity.

Power and water consumption data

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Programme Duration approx. (hours : minutes)*	<p>Prewash cycle increases programme duration by approx. 15 minutes. Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456.</p> <p>Consumption data in the home may vary with respect to the values given in the table in relation to the water supply pressure and temperature, the load and the type of wash.</p> <p>* The remaining time display may differ from the values given in the table since it depends on the conditions of use in the home.</p> <p>** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.</p>
Cotton	90	5.0	49**	1.20	1:56	
Cotton	60	5.0	49	0.95	2:13	
Cotton	40	5.0	49	0.45	2:00	
Synthetics	60	2.5	42	0.80	1:44	
Synthetics	40	2.5	42	0.43	1:34	
Synthetics short	30	2.0	30	0.30	0:40	
Delicate	30	1.5	47	0.45	0:53	
Wool	40	1.0	58	0.45	0:48	
Handwash	30	2.0	55	0.25	0:51	

Whirlpool is a registered trademark of Whirlpool USA

5019 301 20104

(We reserve the right to make technical modifications)